Alphaeus 3

Installation Instructions - Page 1/2



WARNING


READ BEFORE INSTALLATION

Installation must be carried out by a qualified electrician only.

- · Disconnect power before installing
- Do NOT exceed specified power rating.
- Refer to specification for operating conditions.
- Do NOT connect luminaire directly to mains power.
 Luminaire must be connected to an LED driver.
- Control system connected to driver NOT, Luminaire.
- Ensure correct polarity of all LED & control connections.
- Disconnect fitting before any maintenance or investigating any faults.

- Do NOT connect fitting to Live Driver.
- Do NOT install fitting under water
- Do NOT clean with high pressure water jets or harsh chemicals
- Do NOT install or turn on if luminaire or connectors are damaged
- All connections must be IP67
- ONLY CONNECT LUMINAIRE TO POWER SUPPLY WITH MAINS POWER TURNED OFF!

Provided

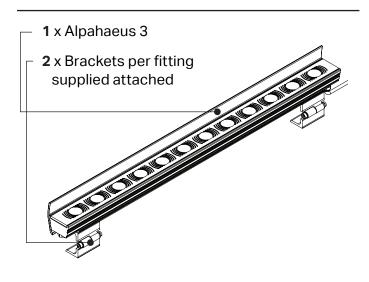

You will need

Tools:

Drill

Fixings:

M6 Fasteners (not supplied)


Additional:

10m Extension Lead (Order Separately)


Dimensions

1 Distance between brackets

Fitting Length	L1	L2
627mm	497mm	537mm
927mm	797mm	837mm
1227mm	1097mm	1137mm

 

2 Leave a minimum gap of 2mm between fittings.

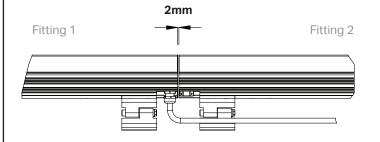

Alphaeus 3


Installation Instructions - Page 2/2




Surface Mount Installation

1 Drill fixing holes in mounting surface. Refer to table for slot locations.

Fix the Alphaeus 3 fitting to the mounting surface.

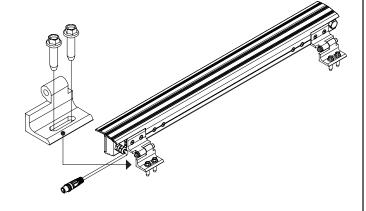


2 Set the angle of fitting and tighten bolts

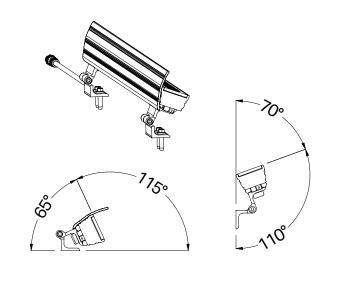

3 Connect the luminaire to the driver using an extension lead.

 Cut to length if needed (10m Supplied)



ONLY CONNECT LUMINAIRE TO POWER SUPPLY WITH MAINS POWER TURNED OFF!

ALP-3-1121



