Figaro-60-A-R

Installation Instructions - Page 1/2



WARNING


READ BEFORE INSTALLATION

Installation must be carried out by a qualified electrician only.

- Disconnect power before installing.
- Refer to project drawings for assembly information.
- Do not exceed specified power rating.
- Refer to specification for operating conditions.
- Ensure correct polarity of all LED & control connections.
- In the event of tripping or irregular operation, disconnect power mains and connection to luminaire before investigating the problem.

Product Details

Fitting Length	Cut-out Width	Cut-out Length
881mm	72mm	885mm
1171mm	72mm	1175mm
1461mm	72mm	1465mm
1751mm	72mm	1755mm
2042mm	72mm	2046mm
2332mm	72mm	2336mm
2622mm	72mm	2626mm
2912mm	72mm	2916mm

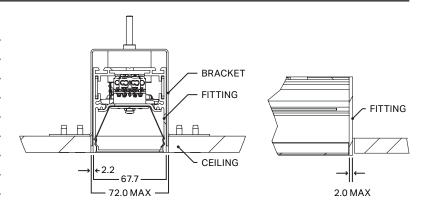


Installation Instructions

1 Mains and DALI Connection

 1. Brown:
 Live
 4. White:
 DALI 1 or 0-10V


 2. Blue:
 Neutral
 5. Red:
 DALI 2 or 0-10V+


3. Green/Yellow: Earth




Ensure strain relief clamps on outer insulation

2 Snap diffuser out of fitting

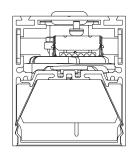


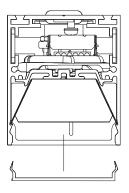

3 Using a flat-head screwdriver - turn the locking clips 90° clockwise to unlock gear trays. Take care not to damage the LED's

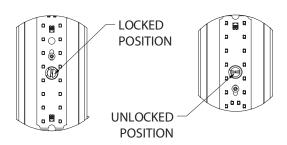

Remove gear trays, taking care disconnecting the electrical connections.

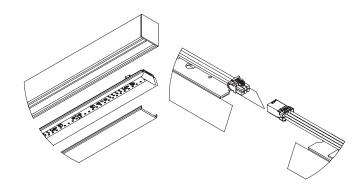


Figaro-60-A-R

Installation Instructions - Page 2/2




Installation Instructions

Place the brackets into the ceiling cut out and fasten in place with screws through the ceiling substrate.

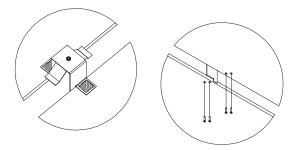


Using the M6 Bolt, fasten the extrusion to the bracket. Tighten bolts inside the fitting extrusion profile until the bracket twists into locked position. Continue tightening until the edges are at finished ceiling level.

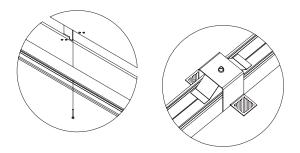

When installing the joined extrusion, fasten the joining plates on back and side half way into each housing profile.

Tighten the screws to hold in place

Housings can be damaged if overtightened

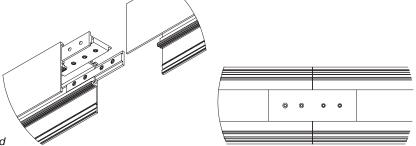

7 Replace gear trays making sure to connect electrical connections, including connecting the earth wire to the terminal block, and lock gear trays into place.

Tuck the reflector into the groove to hold in place. Snap the diffuser into the extrusion.

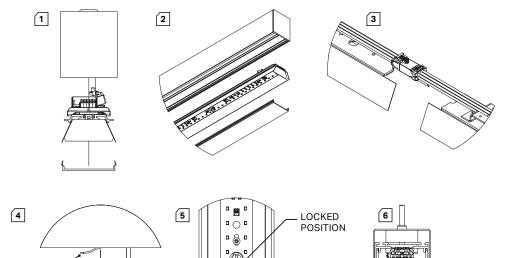


FIG60-A-R-1122





FARTH